

Confirm Your Receiver Is Set To The New Satellite Frequency/Channel

Once the Husker Sports Network satellite signal has moved to the AMC-18 satellite, and you have your dish pointed at that satellite and the HSN DCR-974 satellite receiver coax cable connected to your dish pointed at AMC-18 – you should have a solid green DEMOD and a solid green CXRID light on the front of the receiver, indicating you are locked on the new signal.

To confirm your receiver is on the new satellite frequency settings...

1. Press **PAGE** ↑ (UP) until you see **DEMOD** on the display
2. Press **ENTER**
3. Press **PAGE** ↑ (UP) until you see **FREQUENCY MHz** on the display
4. Confirm the display shows **1429.22** (*not 1380.48*)

If the display does not show 1429.22, follow these steps to change the frequency...

1. Press **PAGE** ↑ (UP) until you see **LOCAL CONTROL PRESS ENTER** on the display
2. Press **ENTER** – the yellow LOCAL light under the display starts flashing
3. Press **PAGE** ↑ (UP) until you see **FREQUENCY MHz** on the display
4. Press **CURSOR** ← (LEFT) twice so the cursor is flashing on the second digit, then press several times the **VALUE** ↑ (UP) button to change the 3 to a 4. The display should now show **1480.48**
5. Press **CURSOR** → (RIGHT) once so the cursor is flashing on the third digit, then press several times the **VALUE** ↑ (UP) button to change the 8 to a 2. The display should now show **1420.48**
6. Press **CURSOR** → (RIGHT) once so the cursor is flashing on the fourth digit, then press several times the **VALUE** ↑ (UP) button to change the 0 to a 9. The display should now show **1429.48**
7. Press **CURSOR** → (RIGHT) once so the cursor is flashing on the fifth digit (the digit to the right of the decimal point), then press several times the **VALUE** ↑ (UP) button to change the 4 to a 2. The display should now show **1429.28**
8. Press **CURSOR** → (RIGHT) once so the cursor is flashing on the sixth (far right) digit, then press several times the **VALUE** ↑ (UP) button to change the 8 to a 2. The display should now show **1429.22**
9. Press **ENTER** and the new frequency setting of 1429.22 will be permanently saved.

10. **PAGE** ↑ (UP) until you see **LOCAL CONTROL PRESS ENTER** on the display. Your signal strength reading should be no less than 10.0
11. Under the front panel display, the **DEMODO** light should be green and the **CXRID** light should be green, indicating you are locked on to our signal
12. After a few minutes, the LOCAL light will stop flashing
13. If the DN LOAD light is flashing, you may press the CANCEL button several times to turn the flashing light off. This does not cancel anything important happening, it only turns off the annoying flashing DN LOAD light.